Register your product and get support at www.philips.com/welcome

SRP1103/27

EN User Manual

PHILIPS

Table of contents

1 Your SRP1103 2
2 Getting started 3-7
2.1 Inserting the batteries 3
2.2 Setting up the universal remote control 3-7
3 Using the universal remote control 7-11
3.1 Buttons and functions 7-10
3.2 Resetting a button to its original function 11
4 Service and support 12-16
4.1 Frequently asked questions 12-14
4.2 Need help? 14
FCC Compliancy 15
Notice for Canada 16
Helpline 17
Brand list 18-29

1 Your SRP1103

Congratulations on your purchase of the Philips SRP1103 universal remote control. After setting up the remote control you can operate up to 3 different devices with it.

Simple Setup
The universal remote control comes with the innovative Simple Setup technology.
After setup, the SRP1103 can operate TV, DVD player / recorder (including Blu-ray player) and all common Cable, Satellite and other set top boxes, such as DirecTV, Comcast, AT&T, Verizon, Time Warner, Scientific Atlanta, TiVo and many more.

Simply follow the instructions in chapter **2.2** to set up the remote control for your devices.

To fully benefit from the support that Philips offers, register your product at:
www.philips.com/welcome

2 Getting started

2.1 Inserting the batteries

- Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

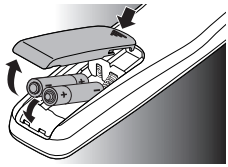

Note

When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

2.2 Setting up the universal remote control

The example below instructs you how to set up your universal remote control for your TV. You can repeat the same steps for other devices (DVD player / recorder and Cable / Satellite box) which you want to operate, using the SRP1103.

The remote control can be set up to operate any 3 of the following devices:

Device name	Description
TV	Traditional TV, LCD / Plasma TV and projection TV, TV part of TV / DVD combos
DVD	DVD player / recorder (DVDR), DVD / Hard Disk Drive combination (DVDR-HDD), Blu-Ray player, High Definition DVD player (HD-DVD), DVD part of TV / DVD-combos

CBL/SAT	Cable box, satellite receiver, Internet Protocol TV (IPTV), Free To Air TV, High Definition Television decoder (HDTV) and TiVo

Example: setting up the universal remote control to operate your TV:

1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.

2 ***Press and hold*** the (TV) deviceselection button ***for 5 seconds*** until the red Setup light ◎ blinks.

- The remote control is now in setup mode.

3 Look up the 4-digit code for your brand in the brand list at the back of this user manual.
A 4-digit code is shown for each brand.
Use the digit buttons to enter the code for your brand.

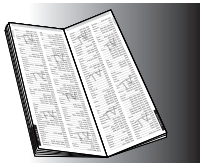

- If the red Setup light ◎ turns off, an invalid code was entered. In this case, try again.

4 Aim the remote control at the TV. ***Press and hold*** the (⏻) button. Release it ***immediately*** as soon as the TV switches off.

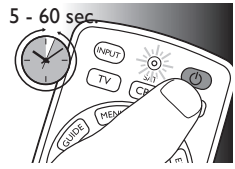

- This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

5 **Switch ON** the TV. Try out the buttons you need for operating it. Try, for example, if the - CH + and digit buttons function properly.

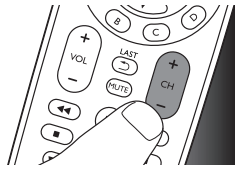

- If a button does not work as expected, ***press and hold*** that button. Release it ***immediately*** as soon as it works. For more information, see chapter **2.2.2**.

6 Press the (TV) device selection button ***twice*** to finish setup.

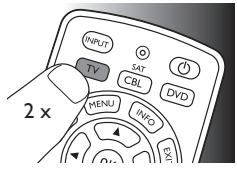

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

! Important

If you made a mistake:
- Press the device selection button ***twice*** to exit setup.
  The red Setup light ◎ turns off.
- Restart from the beginning.

- ***If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.***

2.2.1 Setting up the remote control for other devices (DVD player / recorder and Cable / Satellite box)

1 Make sure the device is switched on and operational. E.g. insert a disc in the DVD player / recorder.

2 Then follow steps **2** to **6** of 'Setting up the universal remote control to operate your TV'. Make sure to use the correct device selection button: (SAT CBL) or (DVD).

2.2.2 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected.
In this case you can have the remote control search for alternatives.

Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

During initial setup

1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
2 Press the button that does not function, keep it pressed and ***immediately*** release it when the device responds. Repeat this for every button that does not function.
- If the button still does not function as expected, try pressing it again for a longer period of time.

After initial setup

1 Make sure the receiving device is able to respond.
E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
2 Select the device that you wish to operate (e.g. DVD). Press the DVD device selection button to select DVD.

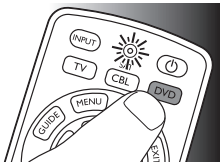

3 Keep buttons 1 and 4 ***pressed simultaneously for 5 seconds***.
- The red Setup light ◎ lights up. The remote control is now in setup mode.

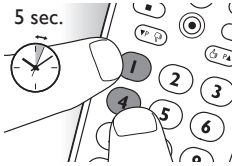

4 ***Press and hold*** the button that does not function and ***immediately*** release it when the device responds.
- If the button still does not function as expected, try pressing it again for a longer period of time.

5 Press the DVD device selection button ***twice*** to save your settings and exit setup mode.
- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

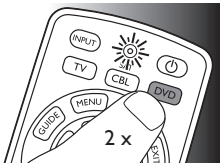

3 Using the universal remote control

3.1 Buttons and functions

The illustration on page 8 gives an overview of all buttons on the remote control. Try out the buttons you need for operating your devices.

Notes

- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP1103 (e.g. Info / Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP1103.

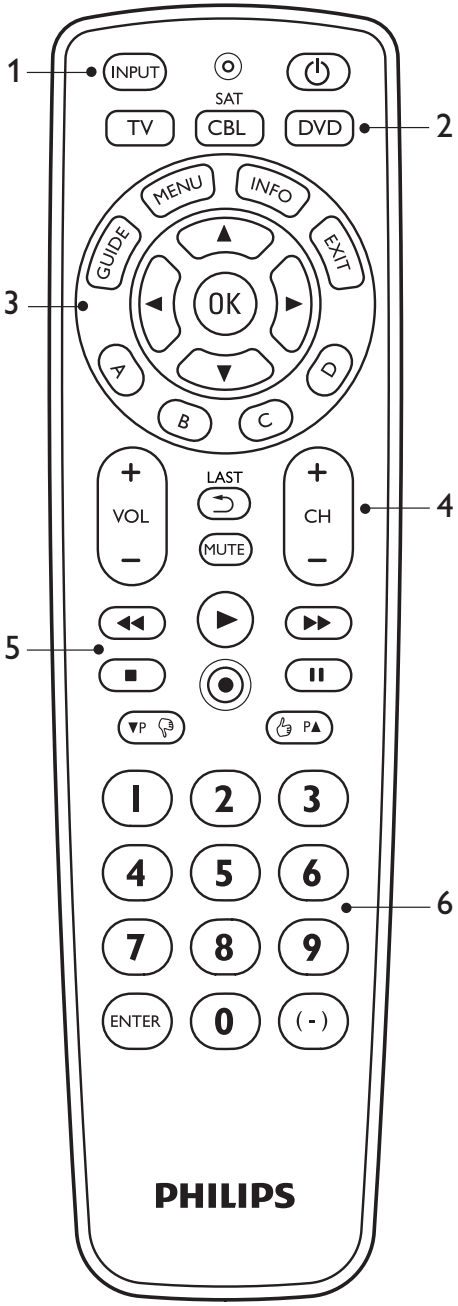

1 INPUT ..... selects available source inputs (antenna, cable, etc.).

◎ ..... setup light. Lights up when a remote control command is being sent, when you just selected a device and when the remote control is in setup mode.

⏻ ..... switches the selected device on / off.

Note

For some TV brands / types, the ⏻ button will only turn off the TV. You will have to press a digit button (direct channel selection) to turn on the TV again.

2 TV SAT CBL DVD ..... device selection buttons. Select the device to be operated.

3

GUIDE ..... electronic program guide.
MENU ..... menu on / off.
INFO ..... on-screen channel information.
EXIT ..... exits / clears on-screen menu displays.
▲ ▼ ◀ ▶ ..... cursor up, down, left, right in a menu.
OK ..... confirms your selection.
A, B, C, D ..... context sensitivity buttons, ordered following the requirements for cable boxes. A - Yellow, B - Blue, C - Red, D - Green.

4 

+ VOL - ..... adjusts TV volume.

LAST ..... previous program / Last / Back.

MUTE ..... mutes TV sound.

+ CH - ..... next / previous channel.

5 

◀◀ ..... rewind.

▶ ..... play.

▶▶ ..... fast forward.

■ ..... stop.

● ..... record.

II ..... pause.

▼P ▲P ..... previous (**▼P**) / next (**▲P**) page / track in various modes.

👎 / 👍 ..... set your Thumb ratings.

6 1 2 3 4 5 6 7 8 9 0 ..... digit buttons for direct channel / track selection.

ENTER ..... used after direct channel selection. Some devices require ENTER to be pressed after channel selection.

(-) ..... selects between one and two-figure channel numbers.

3.2 Resetting a button to its original function

If an improved button (see chapter **2.2.2**) still does not function as expected, you can always reset the button to its original function.

1 In the current device mode, keep digit buttons 1 and 6 ***pressed simultaneously for 5 seconds***, until the red Setup light ⊙ lights up.

- The remote control is now in setup mode.

2 Press digit buttons 9, 9 and 6, in that order.

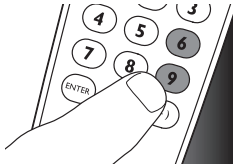

- After each button press the red Setup light ⊙ blinks once.

3 Press the button that you wish to reset ***twice***. E.g. the ▶▶ button.

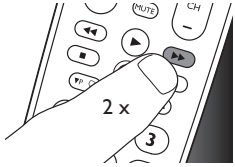

- After each button press the red Setup light ⊙ blinks once.
- The red Setup light ⊙ will blink one more time to confirm that the button was succesfully reset to its original function.

4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

4.1.1 Setup

I cannot enter setup mode.
Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter **2.1**. After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter **2.2**.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.
The 'Shortlist of brands' only mentions the most common TV, DVD and CBL/SAT brands.

- You will find a complete brand list on page 18-29 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV switches OFF in step 4 but does not switch ON again in step 5.
TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter **2.2.2**) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step **6**. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter **2.2.2**.

How do I set the remote control for my TV / DVD combo?
Some combo devices require you to set up two different source selection buttons to control both parts of the combo device. If you have a TV / DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV / DVD combo.

4.1.2 Operation

The remote control does not wake up anymore.
Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter **2.1**. After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter **2.2**.

The device I want to operate does not respond at all / does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter **2.2.2**.

Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

4.1.3 Batteries

Will my settings be deleted when I replace the batteries?
No. All user settings will be retained in the remote control memory for 5 minutes.

Warning

The (included) batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.
If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP1103, you can always contact us.
When calling our helpline, make sure to have the SRP1103 at hand when you call, so that our operators can help you determine whether the SRP1103 is working properly.
You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP1103/27.

Date of purchase:
...../ ...../ .....
(day/month/year)

For **online support** go to:
www.philips.com/welcome
- Click 'Support' and follow the on-screen instructions.

FCC Compliancy
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

User changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice for Canada

This class B digital apparatus complies with Canadian ICES-003.

☎ Helpline

Country	Phone number
United States of America / Canada	1-919-573-7854

A

A.R. Systems....0012
ABC....0013
Abex....0014
Accele Vision....4194
AccessHD....3554
Accurian....0022
Acer....0028
Acura....0036
Addison....0043
Adelphia....4195
Admiral....0046
Advent....0054
Adventura....0055
Adyson....0058
Agashi....0063
AGB....0064
Aiko....0069
Aim....0070
Akai....0074
Akiba....0078
Akito....0082
Akura....0083
Alaron....0085
Alba....0086
Albatron....0087
Alco....0092
Allegro....0103
Alleron....0104
Allorgan....0105
Allstar....0108
Alpha Digital....4014
Alphastar....0113
Alpine....0114
America Action....0123
Americast....0127
Amphion MediaWorks....0135
Amplivision....0138
Ampro....0139
Amstrad....0140
Amtron....0141
AMW....0143
Anam....0146
Anam National....0147
Anglo....0151
Anitech....0154
Ansonic....0156
Antronix....0159
AOC....0165
Apache....0169
Apex....3691
Apex Digital....0170
Apple....0172
Arcam....0179
Archer....0180
Archos....0181
Ardem....0184
Aristona....0192
Arrgo....0197
Artec....4016
Asberg....0205
Aspire....4233
Astar....0218
Asuka....0227
AT&T....3453
Atlantic....0233
Atori....0237
Audiosonic....0264
AudioTon....0266
Audiovox....0268
Autovox....0280
Aventura....0287
Awa....0296
Axion....0299

B

Baird....0311
Bang & Olufsen....0314
Basic Line....0325
Bastide....0327
Baur....0331
Bazin....0335
BBT....0338
Beijing....0345
Beko....0346
Belcor....0348
Bell & Howell....0350
Bell South....0353
Benq....0359
Beon....0361
Best....0364
Bestar....0368
Bestar-Daewoo....0369
Binatone....0378
Black Star....0386
Blacktron....3526
Blackway....0388
Blaupunkt....0390
Blue Parade....0394
Blue Sky....0395
Blue Star....0396
Bondstec....0403
Boots....0405
BOSS....4197
BPL....0413
Bradford....0414
Brandt....0416
Brillian....0422
Brinkmann....0423
Brionvega....0424
Britannia....0425
Brockwood....0430
Broksonic....0432
BSkyB....0436
BTC....0439
Bush....0445
byd:sign....0448

C

Cable Star....0454
Cable Vision....4198
Cabletenna....0456
Cableview....0458
Caihong....0462
California Audio Labs....0467
Candle....0480
CaptiveWorks....0487
Carad....0488
Carena....0489
Carnivale....0491
Carrefour....0492
Carver....0494
Cascade....0496
Casio....0499
Catha....4094
Cathay....0501
CCE....0504
Celebrity....0509
Celera....0510
Centurion....0520
Century....0521
CGE....0523
Changcheng....0526
Changfei....0527
Changhai....0529
Changhong....0530
Channel Master....0531
Chaparral....0533
Ching Tai....0541
Chun Yun....0545
Chunfeng....0546
Chung Hsin....0547
Chunsun....0549
Cimline....0552
CineVision....0562
Citizen....0567
City....0569
Clarion....0575
Clarivox....0576
Clatronic....0581
Clearmaster....0583
ClearMax....0584
CMS....0590
CMS Hightec....0591
Coby....0597
Colortyme....0601
Colour Voice....0602
Colt....0603
Comcast....3456
Commercial Solutions....0615
Comtronics....0623
Concerto....0625
Concorde....0626
Condor....0627
Conrowa....0634
Contec....0635
Contec/Cony....4199
Coolmax....0642
Coolsat....0643
Coship....0646
Cosmel....0647

COX 4200
Craig 0650
Crosley 0655
Crossdigital 0656
Crown 0658
CS Electronics 0663
CTC 0664
CTX 0665
Curtis Mathes 0667
CXC 0670
CyberHome 0672
Cybertron 0675
Cytron 0680

D

Daeryung 0691
Daewoo 0692
Dainichi 0694
Dansai 0699
Dantax 0702
Dawa 0707
Daytron 0710
Decca 0718
Deitron 0722
Dell 0725
Denon 0731
Denver 0733
Desay 0737
Desmet 0738
Diamant 0746
Diamond 0747
Diamond Vision 0748
Digatron 0751
Digi 0754
Digiline 0759
Digital Stream 3809
Dimensia 3569
Director 0793
DIRECTV 0794
Dish Network 3966
Dishpro 0800
Disney 0803
Dixi 0807
DongDa 0820
Donghai 0821
Drake 0825
Drean 0832
DSE(Digital) 0833
DTS 0837
Dual 0838
Dual-Tec 3528
Dumont 0840
Durabrand 0842
Dux 0843
DVD2000 0844
D-Vision 0684
Dwin 0848
Dynatron 0855
Dynex 3476

E

Eastern 0859
Echostar 0866
Eclipse 0867
Eiki 0874
Elbe 0880
Elbe-Sharp 3529
Elcit 0883
Electroband 0888
Electrograph 0889
Electrohome 0890
Elektra 0896
Element 3477
ELG 0900
Elin 0902
Elite 0903
Elman 0907
Elta 0910
Emerson 0917
Emperor 0921
Emprex 0922
Enterprise 0931
Envision 0933
Epson 0937
Erres 0942
ESA 0943
ESC 0945
Ether 0948
Etron 0949
Eurofeel 0954
Euroman 0956
Europa 0957
Europhon 0959
Everquest 0971
Expressvu 0977
Exquisit 0978

F

Fagor Life 4102
Feilang 0990
Feilu 0991
Feiyue 0993
Fenmenti 4103
Fenner 0994
Ferguson 0996
Fidelity 0998
Filsai 1000
Finlandia 1003
Finlux 1004
Firstar 1007
Firstline 1008
Fisher 1009
Flint 1014
FNR 1016
Focus 1017
Formenti 1023
Formenti-Phoenix 1024
Fraba 1030
Friac 1040
Frontech 1042
Fujitsu 1052
Fujitsu General 1053
Funai 1056
Furi 1057
Futuretech 1064

G

Galaxi 1068
Galaxis 1069
Garrard 1075
Gateway 1076
GBC 1078
GC Electronics 1080
GE 1081
GEC 1083
Gehua 1086
Geloso 1087
Gemini 1089
General Instrument 1093
General Technic 1095
Genexxa 1097
GFM 3820
Giant 1113
Gibralter 1114
Go Video 1126
GOI 1130
Goldhand 1136
Goldline 1138
GoldStar 1140
Goldstar 1140
Goodmans 1142
Goodmind 1143
GPM 1149
Gradiente 1151
Graetz 1152
Granada 1154
Grandin 1156
Greenhill 1157
Gronic 1160
Grundig 1162
Grunpy 1165

H

Haier 1175
HaiHong 1176
Halifax 1179
Hallmark 1180
Hamlin 1182
Hampton 1183
Hankook 1188
Hanseatic 1190
Hantarex 1192
Hantor 1193
Harman/Kardon 1198
Harvard 1202
Harwood 1204
Hauppauge 1206
Havermy 1208
HCM 1210
Hello Kitty 1221
Hema 1222
Hemmermann 1223

Hewlett Packard...1229
Higashi...1234
Highline...1236
Hikona...1237
HiLine...3533
Hinari...1243
Hisawa...1247
Hisense...1249
Hitachi...1251
Hitachi Fujian...1252
Hiteker...1255
Hitsu...1257
Hoeher...1262
Hongmei...1272
Hornyphone...1277
Hoshai...1278
HTS...1285
Huafa...1287
Huanghaimei...1288
Huanghe...1289
Huanglong...1290
Huangshan...1291
Huanyu...1292
Huari...1294
Hughes...4205
Hughes Network Systems...1296
Humax...1298
Hygashi...1308
Hyper...1309
Hypson...1312
Hytex...1314
Hyundai...1315

I

Iberia...1320
ICE...1324
ICeS...1325
Illico...4206
Ilo...1341
iLuv...4234
IMA...1342
Imperial...1346
Indiana...1350
Infinity...1352
InFocus...1353
Ingelen...1354
Ingersol...1355
Initial...1356
Inno Hit...1358
Innova...1359
Insignia...1368
Integra...1370
Inteq...1373
Interbuy...1376
Interfunk...1377
Internal...1379
International...1380
Intervision...1386
IR...4110
Irradio...1396
Isukai...1402
iSymphony...3755
ITC...1404
ITS...1405
ITT...1406
ITV...1408

J

Janeil...1414
Jasco...1415
JBL...1420
JC Penney...4208
JCB...1421
Jean...1424
Jensen...1429
Jerrold...1431
Jinxing...1442
JVC...1464
Jwin...1465

K

Kaisui...1471
Kamp...1475
Kanghua...1477
Karcher...1484
Kawa...1487
Kawasaki...1488
Kawasho...1489
Kaypani...1490
KEC...1496
Kendo...1500
Kenwood...1507
KIC...1512
Kingsley...1520
Kiota...1522
Kioto...1523
Kiton...1525
KLH...1529
Kloss Novabeam...4210
Kneissel...1535
Kolin...1541
Kolster...1543
Konig...1547
Konka...1548
Korpel...1552
Korting...1554
Kosmos...1557
Koss...1558
KTV...1572
Kyoshu...1583
Kyoto...1585

L

L&S Electronic...1588
Landel...1593
Lasonic...1600
Layco...4117
Lecson...1606
Lenco...1615
Lenoir...1617
Lenoxx...1618
Lesa...1622
Lexicon...1625
Leyco...1627
LG...1628
Liesenk & Tter...1630
Liesenkotter...1631
Lifetec...1633
Linsay...1642
Liquid Video...1644
Liteon...1645
Lloyd's...1648
Local India TV...1653
Loewe...1660
Loewe Opta...3540
Logik...1661
Luma...1674
Lumatron...1676
Lux May...1680
Luxman...1682
Luxor...1683
LXI...1686

M

M & S...1687
Madison...1698
Magnadyne...1702
Magnafon...1703
Magnasonic...1704
Magnavox...1706
Magnin...1708
Magnum...1709
Majestic...1713
Manesth...1718
Manhattan...1719
Marantz...1724
Mark...1731
Masuda...1744
Matsui...1750
Matsushita...1751
Maxent...1757
Mediator...1784
Medion...1787
Medison...1788
MegaCable...4211
Megapower...1791
Megatron...1795
Melectronic...3654
Memorex...1800
Memphis...1802
Mercury...1804
Metz...1810
MGA...1811
MicroGem...4024
Micromaxx...1822
Microsoft...1826
Midland...1831
Minato...1835
Minerva...1838
Minoka...1840
Mintek...1845
Minutz...1847
Mitsubishi...1855

Mivar 1857
Monivision 1872
Montgomery Ward 4212
Morgans 3970
Motorola 1878
Movie Time 1880
MTC 1889
MTlogic 1892
Multistandard 1904
Multitec 1906
Multitech 1907
Multivision 1909
Murphy 1911
Musikland 1915

N

NAD 1926
Naiko 1930
Nakamichi 1932
Nakimura 1933
NEC 1950
Neckermann 1951
NEI 1952
Nesa 1959
Nesco 1960
NET Brazil 1962
Netsat 1966
NET-TV 1967
Neufunk 1970
New Tech 1979
New World 1980
Newave 1981
Next Base 1983
Next Level 1984
Nexus 1989
Nexxtech 1990
Nicamagic 1994
Nikkai 1998
Nikko 2000
Noblex 2013
Nobliko 2014
Nokia 2017
Norcent 2020
Nordic 2021
Nordmende 2022
Normerel 2024
Noshi 2030
Nova Vision 2032
Novaplex 2034
Novatronic 2035
NSC 2042
NTC 2045

O

Oak 2059
Okana 4122
Okano 2065
Olevia 2067
Onimax 2082
Onkyo 2085
Onwa 2087
Opera 2090
Oppo 2092
Optimus 2095
Optoma 2097
Optonica 2099
Orbit 2103
Orion 2111
Oritron 2112
Orline 2113
Orsowe 2116
Osaki 2118
Osio 2121
Oso 2122
Osume 2123
Otto Versand 2126

P

Pace 2134
Pacific 2135
Pael 2140
Palladium 2145
Palsonic 2147
Panama 2149
Panasonic 2153
Panasonic/National 2153
Panavision 2154
Panda 2155
Pansat 2158
Panther 2160
Paragon 2161
Pathe Cinema 2168
Pausa 2171
Paysat 2173
PCT 4213
Penney 2182
Perdio 2185
Perfekt 2186
Philco 2192
Philharmonic 2194
Philips 2195
Philips Magnavox .. 3715
Phoenix 2199
Phonola 2201
Phonotrend 2202
Pilot 2207
Pioneer 2212
Pionier 2213
Plantron 2219
Plasmsync 4230
Playsonic 2224
Polaroid 2230
Polk Audio 2232
Poppy 2236
Popular Mechanics 2237
Portland 2238
Powerpoint 2241
Prandoni Prince 4125
Precision 2244
Prelude 2247
Price Club 2252
Prima 2253
Primestar 2257
Princeton 2258
Prinz 2260
Prism 2261
Proceed 2267
Profekt 4126
Profex 2269
Profitronic 2273
Proline 2274
Proscan 2279
Prosonic 2282
Protech 2284
Proton 2288
Protron 2289
Proview 2290
Provision 2291
Pulsar 2296
Pye 2302
Pymi 2304

Q

Quasar 2320
Quelle 2322
Questa 2324
Qwestar 2326

R

Radialva 2329
Radio 4128
Radio Shack/Realistic 4214
Radiola 2330
Radiomarelli 2331
RadioShack 2333
Radiotone 2334
RCA 2351
Realistic 2354
Recor 2359
Recoton 2361
Rectiligne 2362
Redstar 2366
Reflex 2368
Regal 2370
Regency 2371
Regent 2372
Rembrandt 2375
Reoc 2379
Revox 2383
Rex 2385
RFT 2386
Rhapsody 2387
Rio 2393
R-Line 2327
Roadstar 2398
Rogers 4215
Rotel 2414
Rowa 2416
Runco 2423

S

Saba 2429
Saisho 2437
Saivod 2439
Salora 2443
Sambers 2445
Sampo 2446
Samsung 2448
Sandra 2454
Sansui 2458
Sanyo 2462
Sanyuan 2464
SBR 2492
Sceptre 2498
Schaub Lorenz 2500
Schneider 2501
Scientific Atlanta 2503
Scimitsu 2505
Scotch 2506
Scott 2508
Sears 2514
SEG 2522
SEI 2524
SEI-Sinudyne 2525
Seleco 2528
Sencora 2531
Sensory Science 2533
Sentra 2534
Serino 2539
Shanghai 2547
Shaofeng 2549
Sharp 2550
Sharper Image 2551
Shen Ying 2552
Shencai 2553
Sheng Chia 2554
Shenyang 2555
Sherwood 2557
Shinco 2560
Shinsonic 2562
Shintoshi 2564
Shivaki 2567
Shogun 2568
Siam 2572
Siarem 2573
Siemens 2574
Siera 2576
Sigma Designs 2579
Signal 2581
Signature 2582
Silva 2591
Silva Schneider 2592
Silver 2594
Simpson 2598
Singer 2599
Sinudyne 2601
SKY 2610
Skygiant 2618
SL Marx 2633
Sogera 2649
Solavox 2654
Sonawa 2663
Sonic Blue 2667
Sonicview 3954
Soniko 2669
Sonitron 2671
Sonneclair 2673
Sonoko 2675
Sontec 2677
Sony 2679
Sound & Vision 2680
Soundesign 2684
Soundwave 2689
Sowa 2691
Squareview 2703
Srypton 4138
SSS 2708
Standard 2713
Standard Component 2714
Star Choice 2716
Starcom 2722
Stargate 2723
Starlite 2728
Starquest 2732
StarSight 2734
Stenway 2739
Strato 2745
STS 2749
STS1 4219
STS2 4220
STS3 4221
STS4 4222
Studio Experience 2750
Stylandia 2752
Sungale 2761
Sunkai 2762
Sunstar 2768
Sunwood 2772
Supercable 2778
Superla 2782
Supermax 2783
SuperScan 2786
SuperTech 2789
Supervision 2791
Supra 2792
Supre-Macy 2794
Supreme 2795
Sutron 2798
SVA 2800
Sydney 2808
Sylvania 2809
Symphonic 2810
Synco 2811
Syntax 2814
Syntax-Brillian 4231
Sysline 2815
Sytong 2820

T

Tacico 2823
Taishan 2835
Tandy 2843
Tashiko 2850
Tatung 2852
Teac 2860
Teachimagen 4140
Tec 2861
Tech Line 2863
Techica 2865
Technema 2866
Technics 2869
Techview 2883
Techwood 2884
Teco 2886
TEDELEX 2889
Teknika 2895
Telecaption 2902
Telecor 2910
Telefunken 2914
Telefusion 2915
Telegazi 2917
Telemeister 2924
Telesonic 2930
Telestar 2931
Teletech 2934
Teleton 2935
Televideon 2938
Teleview 2939
TeleView 2939
Tennessee 2952
Tensai 2954
Tenson 2955
Terapin 2958
Tevion 2962
Texet 2963
Texscan 2965
TFC 2967
Theta Digital 2970
Thomson 2972
Thorn 2974
TIME WARNER 3518
Timeless 2985
Tivax 3956
Tivo 2991
TMK 2994
TNCi 2996
Tocom 3000
Tokai 3001
Tokyo 3004
Tomashi 3006
Torx 3020
Toshiba 3021
Totevision 3024
Towada 3028
Toyoda 3030
Trakton 3036
Trans Continens 3037
Trans PX 3038
Transfec 4143
Transonic 3041
Transtec 3042
Tredex 3045
Trident 3054

Tristar 3057
Triumph 3058
Trutech 3467
TS 3063
Tuntex 3069
Tusa 3073
TV86 3076
Tview 3079
TVS 3081

U

U. S. Electronics 3123
Uher 3089
UltimateTV 3091
Ultravox 3095
Unic Line 3100
Uniden 3101
Unika 3102
United 3106
United Artists 3107
United Cable 3108
Universal 3113
Universum 3115
Univox 3116
Urban Concepts 3121
US Digital 3122
US Logic 3124

V

V2 3128
Vector Research 3137
Venturer 3143
Verizon 3146
Vestel 3148
Vexa 3149
Victor 3155
VIDEOLOGIC 3165
Videologique 3166
VideoSystem 3172
Videotechnic 3173
Videotron 3175
Vidikron 3178
Vidtech 3179
View Star 3187
Viewmaster 3182
Viewsat 3185
Viewsonic 3186
ViewStar 3187
Viking 3188
Viore 3192
Visco 4232
Visiola 3197
Vision 3198
Vizio 3211
Vocopro 3213
Voom 3216
Vortec 3217
Vortex View 3218
Voxson 3220

W

Waltham 3230
Wards 3231
Watson 3233
Watt Radio 3234
Waycon 3237
Wega 3238
Wegavox 3239
Weltblick 3245
Westinghouse 3249
Wharfedale 3255
White Westinghouse 3258
Windstar 3266
Winegard 3268

X

Xbox 3295
Xiahua 3299
Xiangyu 3302
Xingfu 3305
Xinghai 3306

Y

Xrypton 3317
Yamaha 3326
Yamishi 3328
Yapshe 3329
Yokan 3335
Yoko 3336
Yorx 3340
Yuhang 3345

Z

Zanussi 3349
Zenith 3356
Zentech 4031
Zentek 3361
Zhuhai 3364

© 2010 Koninklijke Philips Electronics N.V.
All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.
The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication there of does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5304 1

October 2010

www.philips.com

RTP/4010